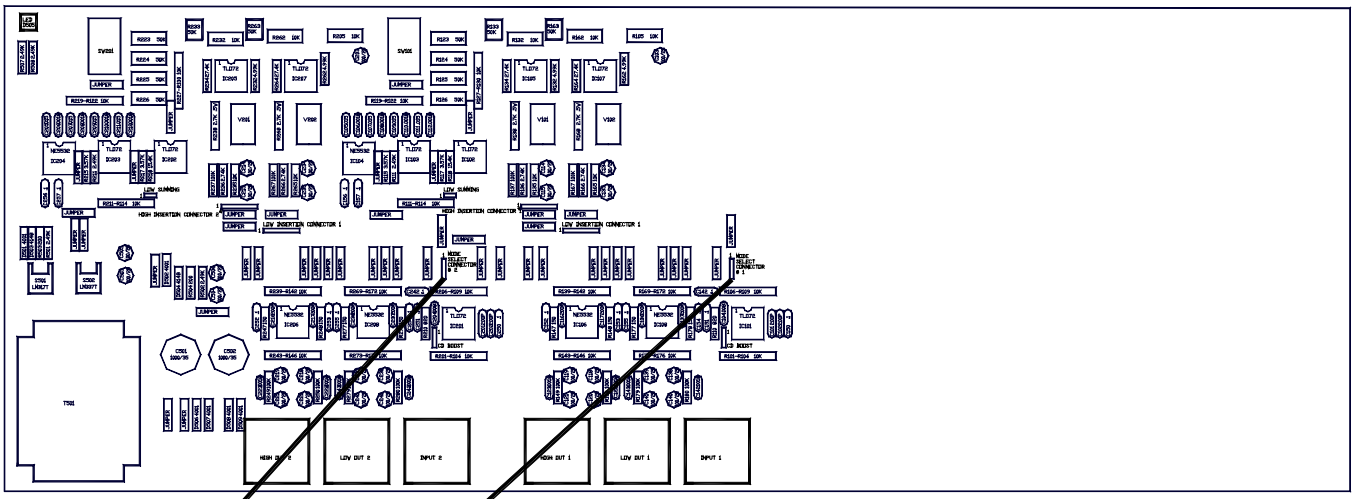

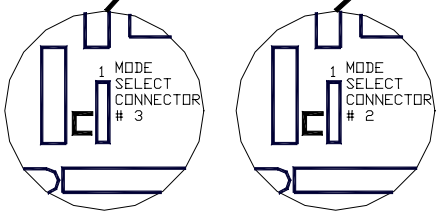

STEREO 2-WAY MODE

LOW 1 = LOW OUTPUT
HIGH 1 = HIGH OUTPUT
FREQ 1 = HIGH/LOW XOVER PT
CHANNEL 1,2 IDENTICAL

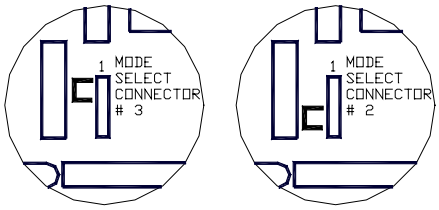

MONO 3-WAY MODE

LOW 1 = NOT USED
HIGH 1 = HIGH OUTPUT
FREQ 1 = HIGH/MID XOVER PT
LOW 2 = LOW OUTPUT
HIGH 2 = MID OUTPUT
FREQ 2 = MID/LOW XOVER PT